

# LOCATION

Engine Room Junction Block

- RADIO No.1 Fuse

Tweeter

Power Amplifier

Radio Assembly

Driver Side Junction Block

- RADIO No.2 Fuse

Rear Speakers

Front Speakers

